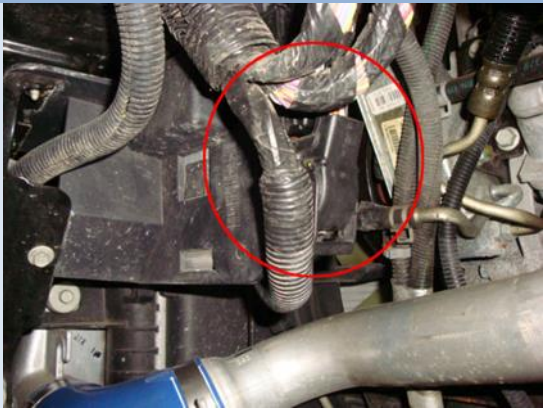


LBZ / LMM ECM Connector Wiring Installation

#1 – Locate ECM Plug 	#2 – Remove the Larger Plug 
#3 – Remove purple locking clip (don't lose it!) 	#4 – Remove top cover 
#5 – Insert new pins/wires Reverse procedures once done. 	Pin-out Reference (viewed looking at connector face). 